

INSTALLATION INSTRUCTIONS

DVCT50 LINER KIT

ABLCK PORCELAIN LINER	
Model 50	Description
DVP50PKR	Black Porcelain
NOTE: Liner Bottom and Liner Top-Assembly are painted.	

LEAVE INSTRUCTIONS WITH THE HOMEOWNER.

CARTON CONTENTS	
Description	Quantity Supplied
Liner Bottom - Front	1
Liner Side - Left	1
Liner Side - Right	1
Liner Rear - Bottom	1
Liner Rear - Top	1
Liner - Top Assembly	1
Bracket Liner	1
#10 X 1/2" Screw	4

TOOLS NEEDED: Phillips Screwdriver

INSTALL LINER

Installation of Bottom Liner

1. Remove barrier screen and glass door.
(See the owner's manual for instructions.)
2. Place the BOTTOM LINER as shown in Figure 1.

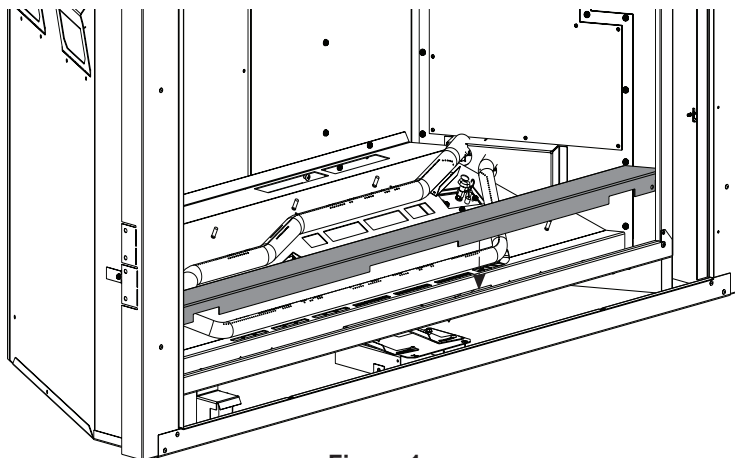


Figure 1

NOTICE: Video of liner installation available on our website at:
www.empirecomfort.com.

Installation of Liner

1. Place LINER REAR - BOTTOM on the back of the firebox and hold with one hand. **See Figure 2.**

NOTICE: For the DVP50PKR only.

NOTICE: Ensure insulation is behind LINER REAR, LINER SIDE - LEFT and LINER SIDE - RIGHT before installing.

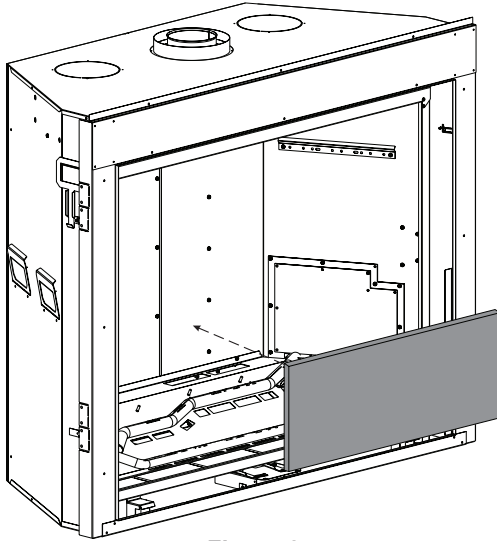


Figure 2

2. Place LINER SIDE - RIGHT against right firebox wall and LINER REAR - BOTTOM and push back to hold into place. **See Figure 3.**

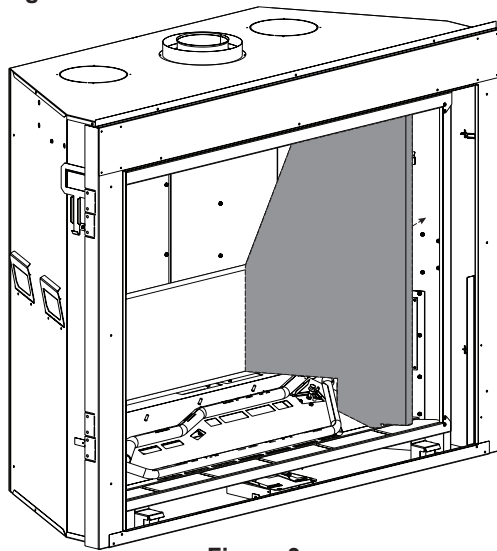


Figure 3

3. Place the LINER REAR - TOP on top of LINER REAR - BOTTOM and rest against right side of FIREBOX and LINER SIDE - RIGHT. **See Figure 4.**

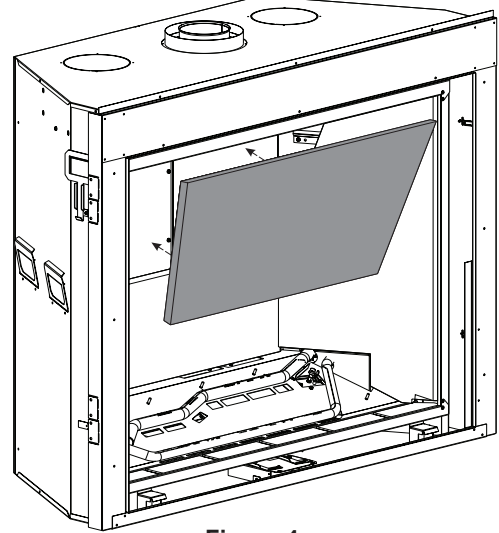


Figure 4

4. Place LINER SIDE - LEFT against left firebox wall and LINER REAR - BOTTOM and push back to hold into place.
5. Place the LINER TOP ASSEMBLY so that it rests on the LINER REAR - TOP and secure with LINER BRACKET and (4) screws. **See Figure 5.**

NOTICE: Ensure porcelain coated side faces down.



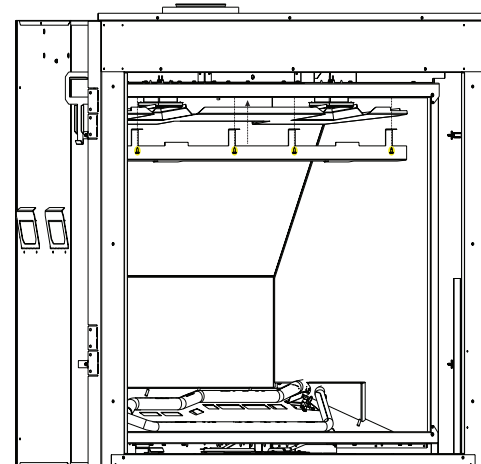


Figure 5

BLACK PORCELAIN LINER KIT EXPLODED VIEW AND PARTS LIST

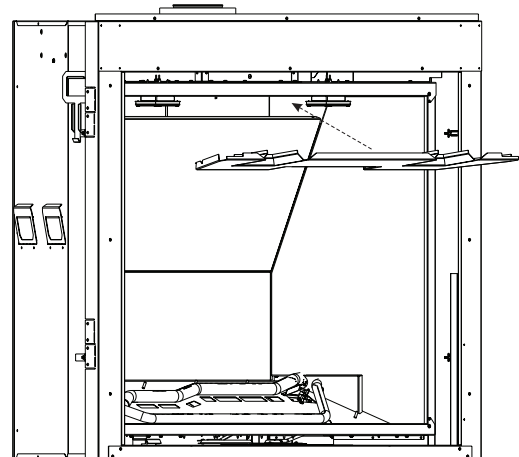

INDEX NUMBER	PART NUMBER	DESCRIPTION	QUANTITY SUPPLIED
	DVP50PKR		
1	39854	Liner Bottom - Front	1
2	39853	Liner Side - Left	1
3	39852	Liner Side - Right	1
4	39855	Liner Rear - Bottom	1
5	39851	Liner Rear - Top	1
6	39848	Liner Top - Assembly	1
7	38271	Bracket Liner	1

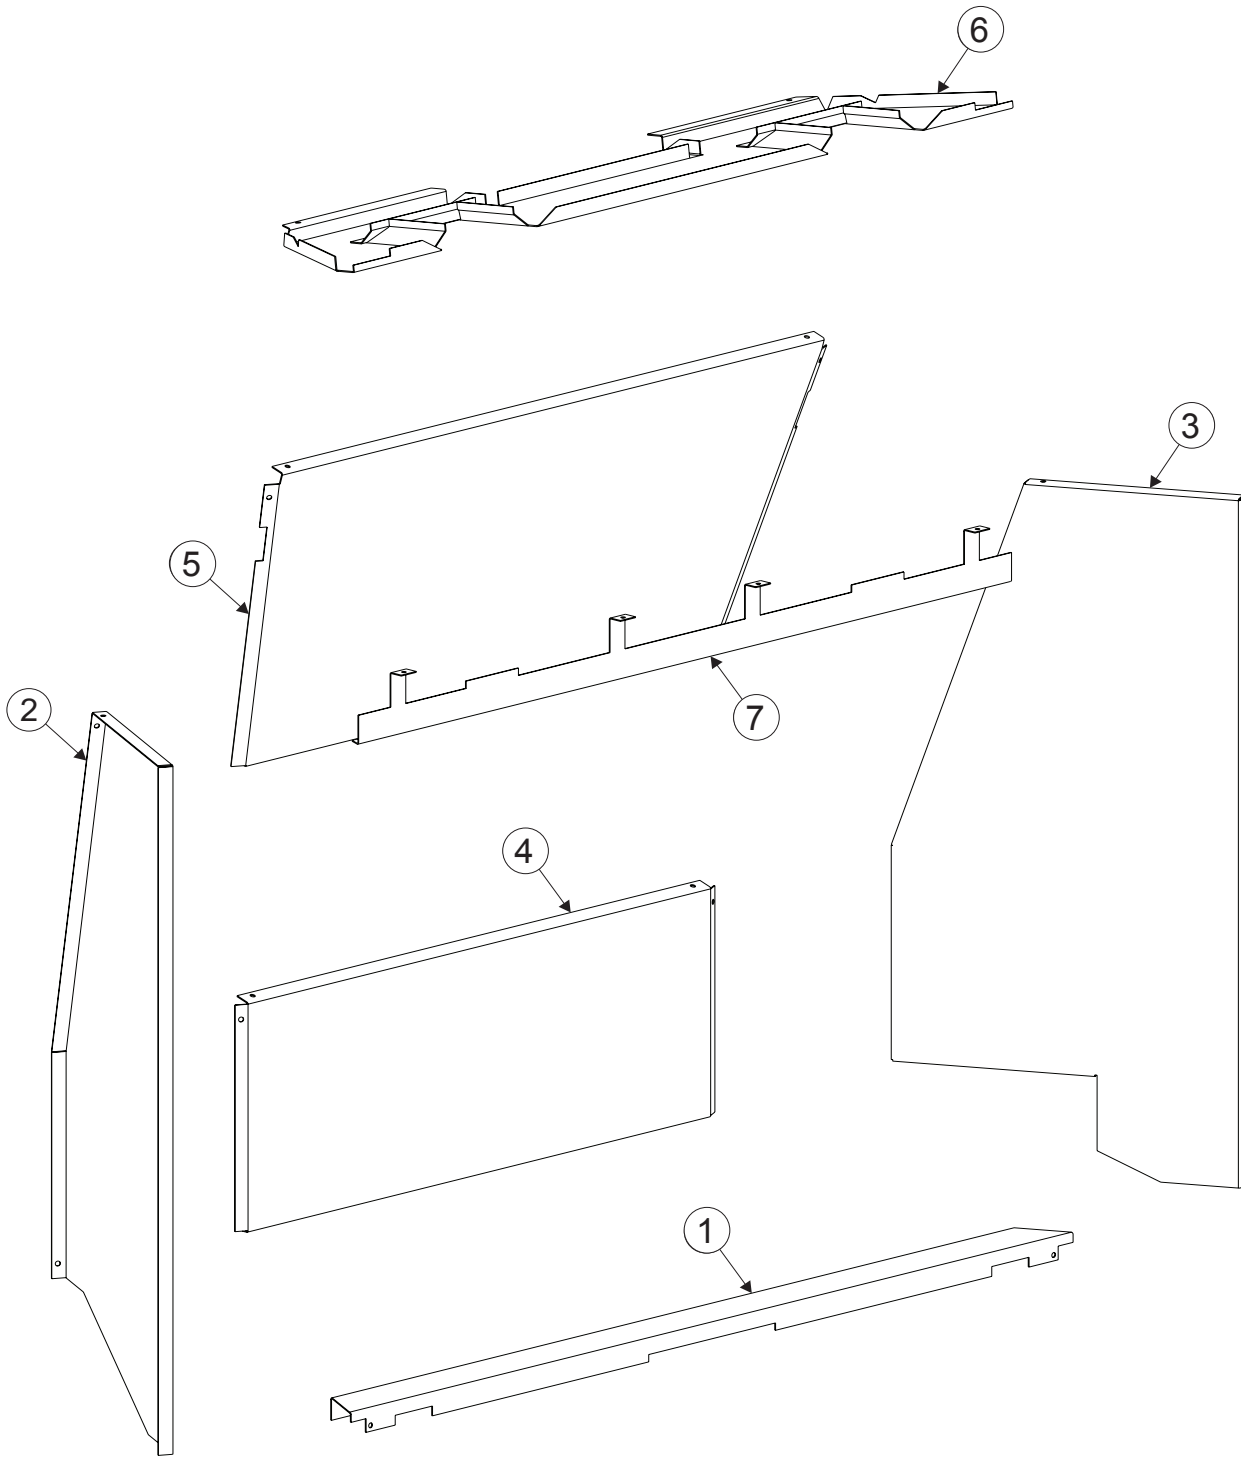

SINCE 1932

Empire Comfort Systems Inc.
Belleville, IL

If you have a general question
about our products, please e-mail
us at info@empirecomfort.com.

If you have a service or repair
question, please contact your dealer.

www.empirecomfort.com

INSTRUCTIONS D'INSTALLATION DE TROUSSE DE GARNITURES DVCT50

GARNITURES À FINI DE PORCELAINE	
Modèle 50	Description
DVP50PKR	Porcelaine noire
REMARQUE : Les garnitures du fond et du plafond sont peintes.	

LAISSER LE FEUILLET D'INSTRUCTION AU PROPRIÉTAIRE.

CONTENU DE L'EMBALLAGE	
Description	Quantité fournie
Garniture Du Fond - Avant	1
Garniture Latérale - Gauche	1
Garniture Latérale - Droite	1
Garniture Arrière	1
Garniture Du Plafond (Incliné)	1
Pièce De Retenue Du Plafond	1
Support De Garniture	1
Vis n° 10 X 1/2 po	4

OUTILS REQUIS : Tournevis Phillips

MONTAGE DES GARNITURES

Pose de la garniture du fond

1. Retirer l'écran de protection et la porte vitrée. (**Pour la procédure, voir le manuel du propriétaire**).
2. Poser la GARNITURE DU FOND comme montré à la **Figure 1**.

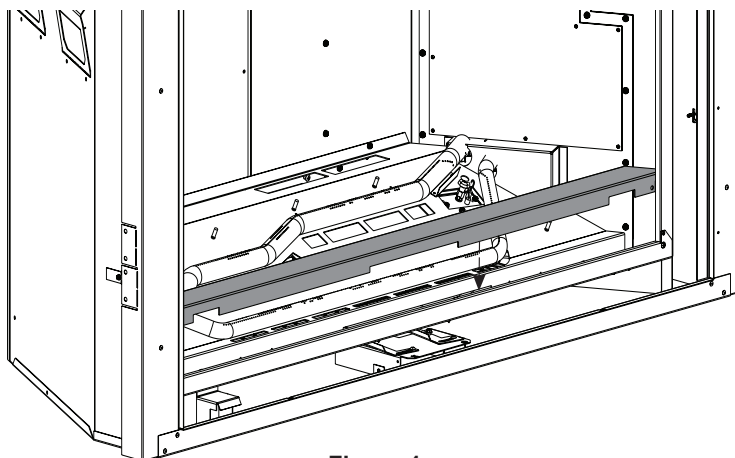


Figure 1

AVIS : Une vidéo de l'installation des garnitures est disponible sur notre site Web à : www.empirecomfort.com

Pose des garnitures

1. Placer le PANNEAU ARRIÈRE sur le mur du fond de l'âtre en le maintenant en place avec une main. **Voir Figure 2.**

AVIS : Pour modèle DVP50PKR seulement.

AVIS : Avant de fixer le plafond, s'assurer que l'isolant ne dépasse pas à l'avant des garnitures arrière et latérales.

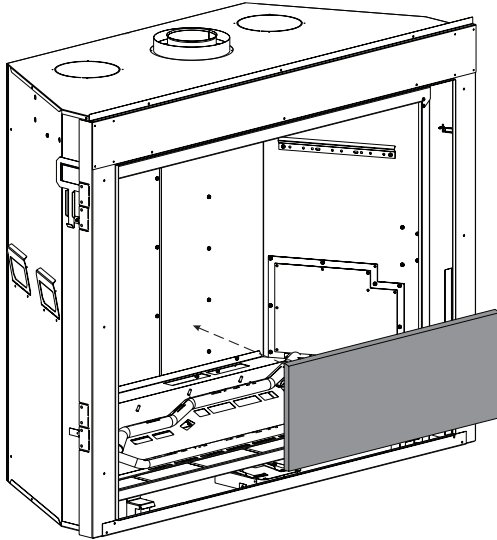


Figure 2

2. Placer la GARNITURE LATÉRALE DROITE contre la paroi du foyer et la GARNITURE ARRIÈRE en les poussant pour qu'ils demeurent en place. **Voir Figure 3.**

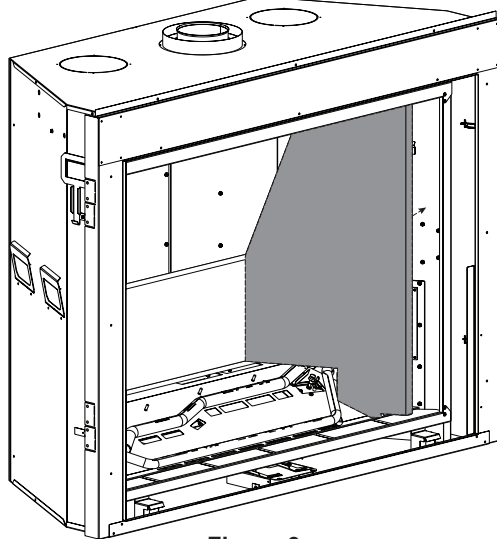


Figure 3

3. Placer le PANNEAU DU PLAFOND sur le bord supérieur de la GARNITURE ARRIÈRE et contre le bord de la GARNITURE LATÉRALE DROITE. **Voir Figure 4.**

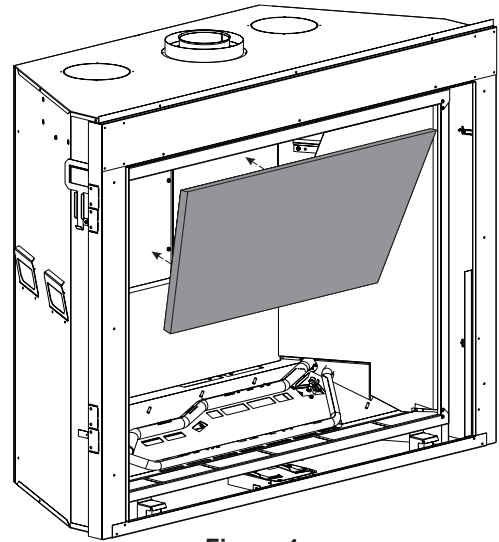


Figure 4

4. Placer la GARNITURE LATÉRALE GAUCHE contre la paroi du foyer et la GARNITURE ARRIÈRE en les poussant pour qu'ils demeurent en place.
5. Placer la PIÈCE DE RETENUE DU PLAFOND sur le devant du plafond et la fixer à l'aide du SUPPORT DE GARNITURE et quatre (4) vis dans le toit de l'âtre. **Voir Figure 5.**

AVIS : S'assurer que le côté fini porcelaine soit placé vers le bas.



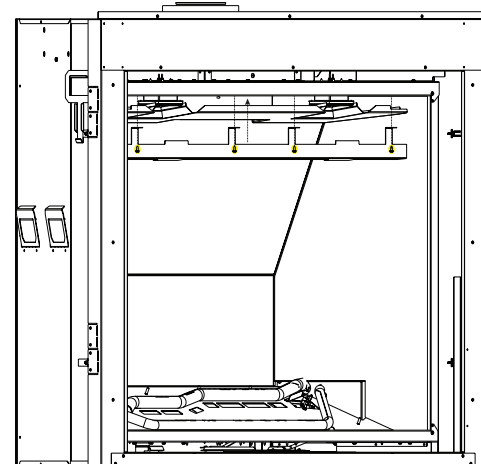


Figure 5

VUE ÉCLATÉE ET LISTE DE PIÈCES DE LA TROUSSE DE GARNITURES DE PORCELAINE NOIRE

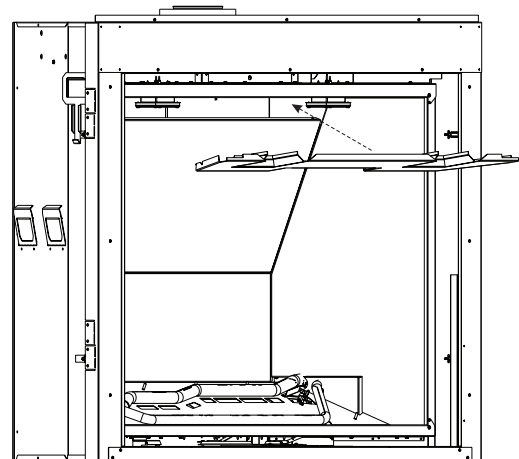

NUMÉRO DE REPÈRE	NUMÉRO DE PIÈCE	DESCRIPTION	QUANTITÉ FOURNIE
	DVP50PKR		
1	39854	Garniture Du Fond - Avant	1
2	39853	Garniture Latérale - Gauche	1
3	39852	Garniture Latérale - Droite	1
4	39855	GARNITURE ARRIÈRE	1
5	39851	Garniture Du Plafond (Incliné)	1
6	39848	Pièce De Retenue Du Plafond	1
7	38271	Support De Garniture	1

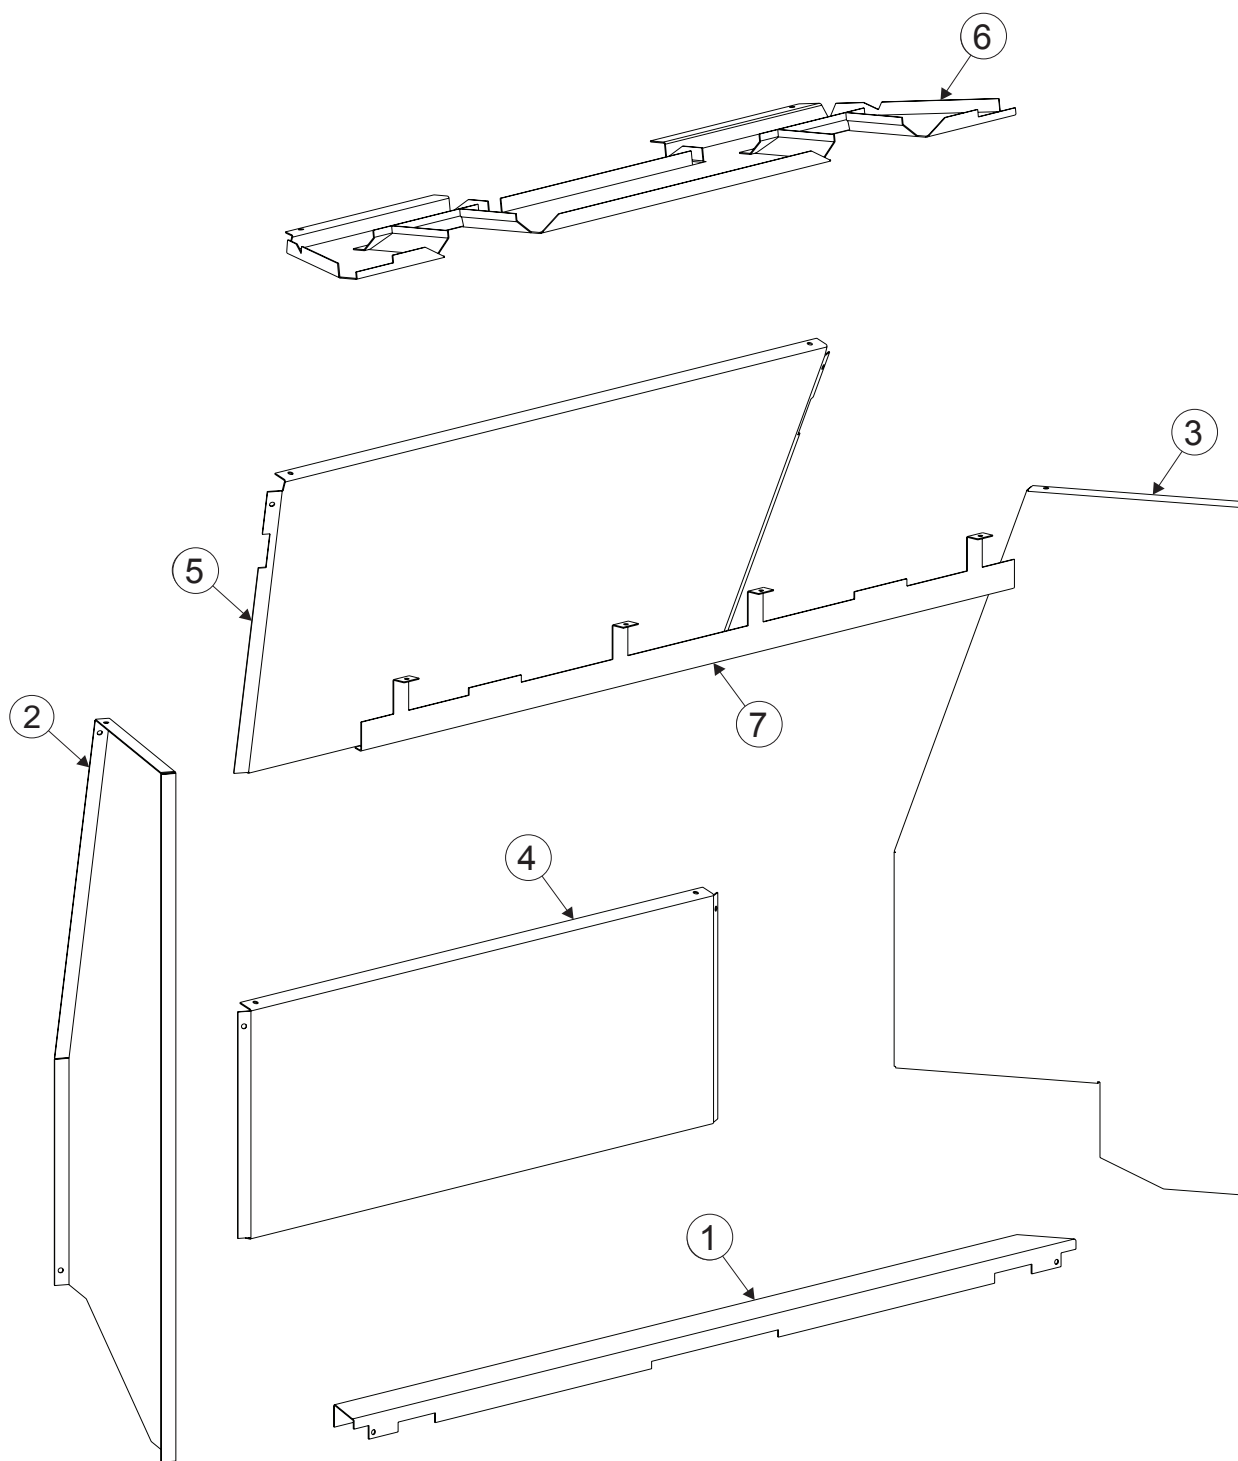

SINCE 1932

Empire Comfort Systems Inc.
Belleville, IL

Pour toute question générale concernant nos produits, veuillez nous envoyer un courriel à info@empirecomfort.com.

Pour toute question d'entretien ou de réparation, veuillez contacter votre concessionnaire.

www.empirecomfort.com



INSTALLATION INSTRUCTIONS

DVCT50 LINER KIT



CERAMIC FIBER LINERS	
Model 50	Description
DVP50PWS	Old World Stone

LEAVE INSTRUCTIONS WITH THE HOMEOWNER.

CARTON CONTENTS	
Description	Quantity Supplied
Liner Front - Left	1
Liner Front - Right	1
Liner Side - Left	1
Liner Side - Right	1
Liner Rear - Bottom	1
Liner Rear - Top	1
Liner Top - Center	1
Liner Top - Left	1
Liner Top - Right	1
Bracket Liner	1
#10 X 1/2" Screw	4

TOOLS NEEDED: Phillips Screwdriver

INSTALL LINER

Installation of Front Liners

1. Remove barrier screen and glass door.
(See the owner's manual for instructions.)
2. Place the RIGHT and LEFT FRONT LINER as shown in **Figure 1**.

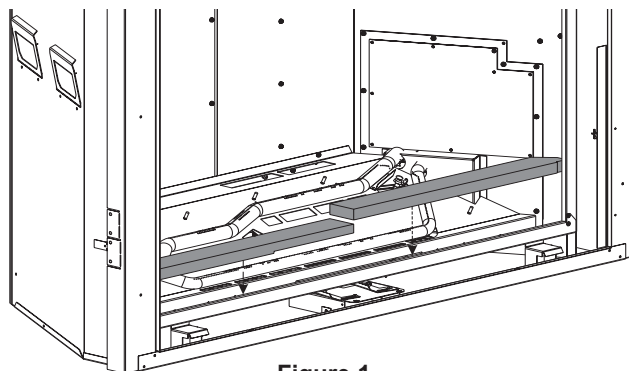


Figure 1

NOTICE: Video of liner installation available on our website at: www.empirecomfort.com.

Installation of Liner

1. Place LINER REAR - BOTTOM on the back of the firebox and hold with one hand. See Figure 2.

NOTICE: Thicker rocks are installed towards the top.

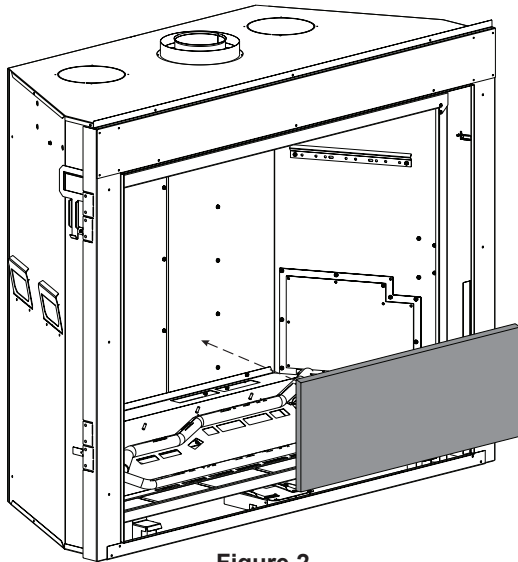


Figure 2

2. Place LINER SIDE - RIGHT against right firebox wall and LINER REAR - BOTTOM and push back to hold into place. See Figure 3.

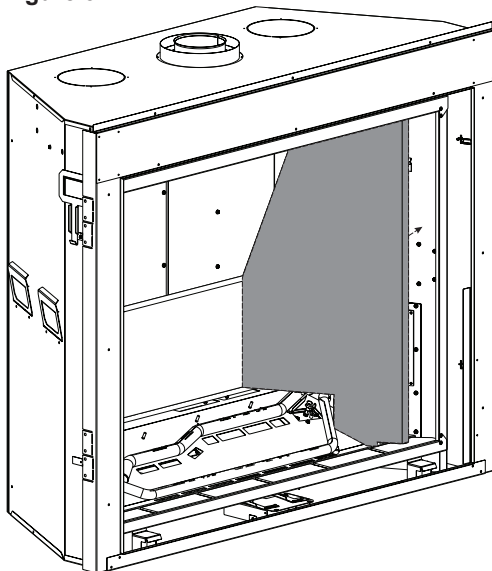


Figure 3

3. Place the LINER REAR - TOP on top of LINER REAR - BOTTOM and rest against right side of FIREBOX and LINER SIDE - RIGHT. See Figure 4.

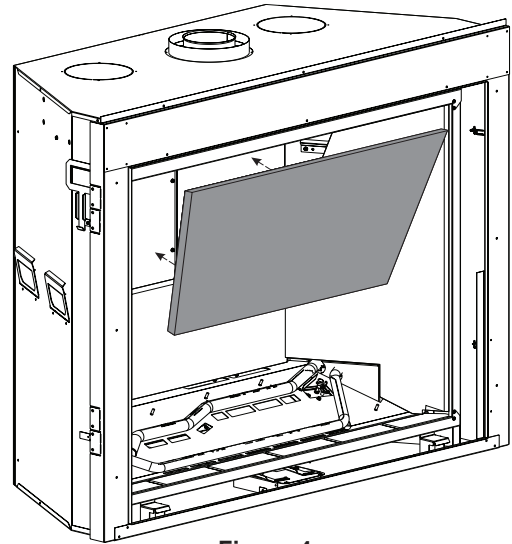


Figure 4

4. Place LINER SIDE - LEFT against left firebox wall and LINER REAR - BOTTOM and push back to hold into place.
5. Secure the LINER BRACKET with (4) screws, then place LINER TOP PIECES so they rest on the LINER REAR - TOP. See Figure 5.

NOTICE: Ensure painted side faces down, black side should face up.



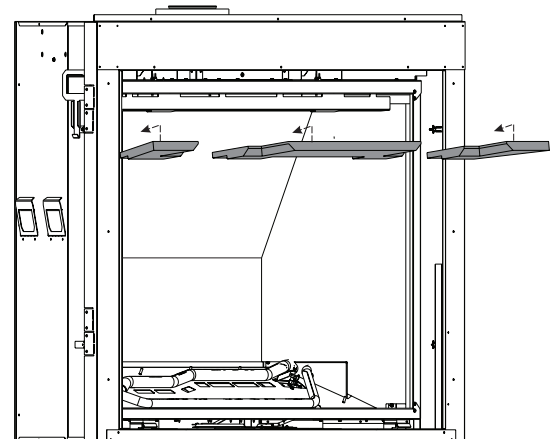


Figure 5

CERAMIC FIBER LINER KIT EXPLODED VIEW AND PARTS LIST

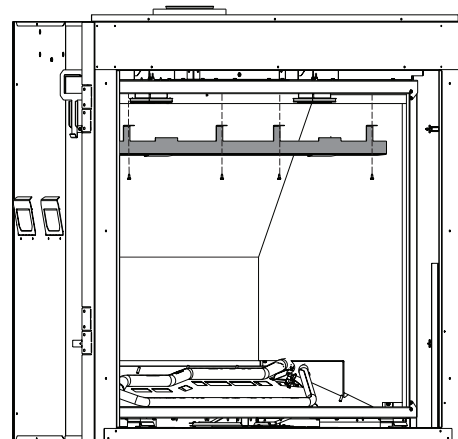

INDEX NUMBER	PART NUMBERS	DESCRIPTION	QUANTITY SUPPLIED
	DVP50PWS		
1	39962	Liner Front - Left	1
2	39963	Liner Front - Right	1
3	39964	Liner Side - Left	1
4	39965	Liner Side - Right	1
5	39966	Liner Rear - Bottom	1
6	39967	Liner Rear - Top	1
7	39968	Liner Top - Center	1
8	39969	Liner Top - Left	1
9	39970	Liner Top - Right	1
10	38271	Bracket Liner	1

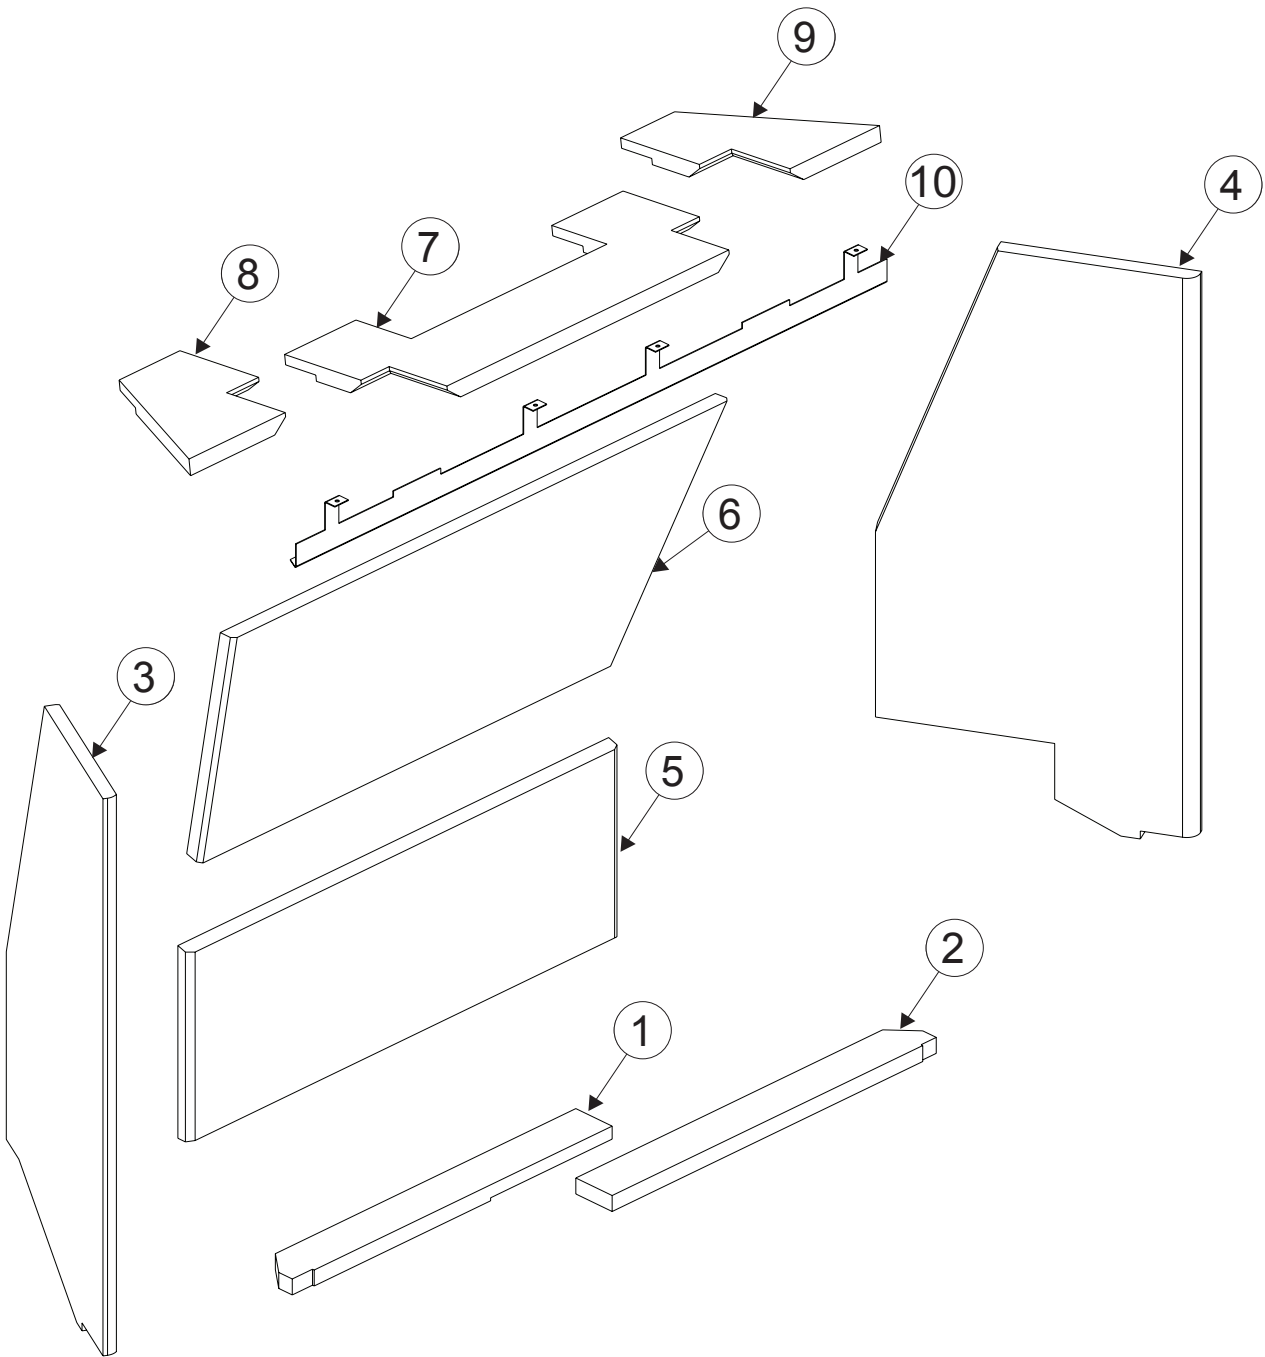

SINCE 1932

Empire Comfort Systems Inc.
Belleville, IL

If you have a general question
about our products, please e-mail
us at info@empirecomfort.com.

If you have a service or repair
question, please contact your dealer.

www.empirecomfort.com

INSTRUCTION D'INSTALLATION DE LA TROUSSE DE REVÊTEMENT DVCT50

REVÊTEMENTS EN FIBRE DE CÉRAMIQUE	
Modèle 50	Description
DVP50PWS	Pierre Romaine

LAISSER LE FEUILLET D'INSTRUCTION AU PROPRIÉTAIRE.

CONTENU DE L'EMBALLAGE	
Description	Quantité fournie
Revêtement Avant - Gauche	1
Revêtement Avant - Droite	1
Revêtement Côté - Gauche	1
Revêtement Côté - Droit	1
Revêtement Arrière - Dessous	1
Revêtement Arrière - Dessus	1
Revêtement Dessus - Centre	1
Revêtement Dessus - Gauche	1
Revêtement Dessus - Droit	1
Support De Revêtement	1
Vis n° 10 X 1/2 po	4

OUTILS NÉCESSAIRES : Tournevis Phillips

MONTAGE DES REVÊTEMENTS

Montage des revêtements avant

1. Retirer l'écran de protection et la porte vitrée. **(Pour la procédure, voir le manuel du propriétaire).**
2. Poser le REVÊTEMENTS AVANT GAUCHE et DROIT, tel qu'illustré à la **Figure 1**.

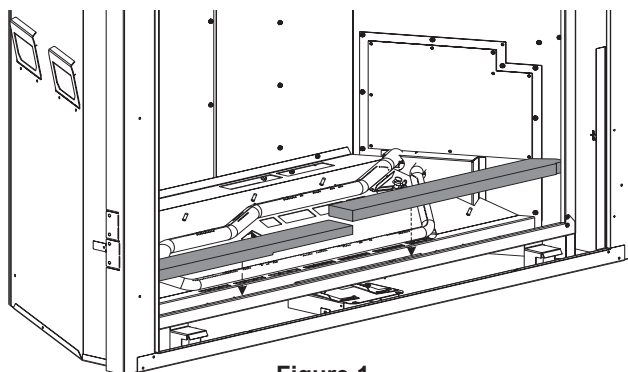


Figure 1

AVIS : Une vidéo de l'installation des revêtements est accessible sur notre site Web à : www.empirecomfort.com.

Montage des revêtements

1. Placer le PANNEAU DU BAS ARRIÈRE sur le mur du fond de la chambre de combustion en le maintenant en place d'une main. **Voir Figure 2.**

AVIS : Les roches les plus épaisses sont posées vers le dessus.

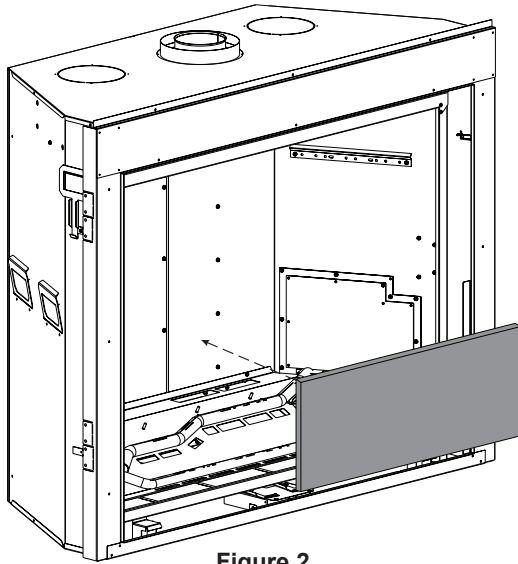


Figure 2

2. Mettre le REVÊTEMENT CÔTÉ DROIT contre la paroi droite du foyer et le REVÊTEMENT ARRIÈRE DU BAS en les poussant pour qu'ils demeurent en place. **Voir Figure 3.**

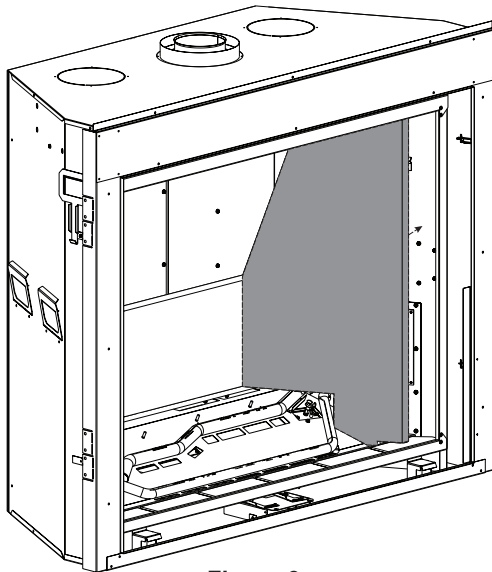


Figure 3

3. Placer le REVÊTEMENT ARRIÈRE DU DESSUS sur le dessus du REVÊTEMENT ARRIÈRE DU BAS et l'appuyer contre le côté droit de la CHAMBRE DE COMBUSTION et LE CÔTÉ DU REVÊTEMENT DROIT. **Voir Figure 4.**

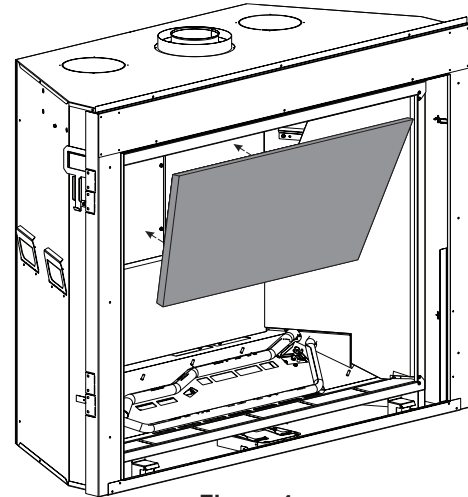


Figure 4

4. Mettre le REVÊTEMENT CÔTÉ GAUCHE contre la paroi gauche de la chambre de combustion et le REVÊTEMENT ARRIÈRE DU BAS en les poussant pour qu'ils demeurent en place.
5. Fixer le SUPPORT DU REVÊTEMENT à l'aide de quatre (4) vis, puis placer les morceaux de revêtement du dessus de manière qu'ils reposent sur le REVÊTEMENT ARRIÈRE DU DESSUS. **Voir Figure 5.**

AVIS : S'assurer que le **côté peint** soit dirigé vers le bas, le **côté noir** devrait être tourné vers le haut.



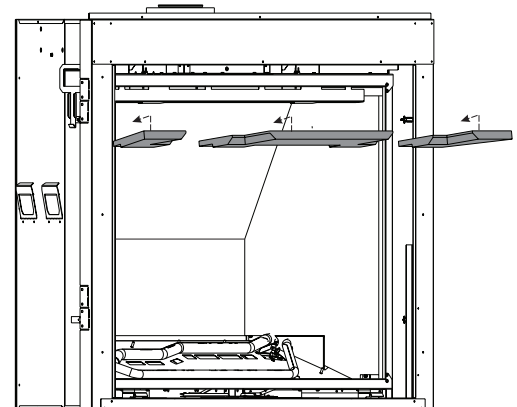


Figure 5

VUE ÉCLATÉE ET LISTE DE PIÈCES DE LA TROUSSE DE REVÊTEMENTS DE FIBRE DE CÉRAMIQUE

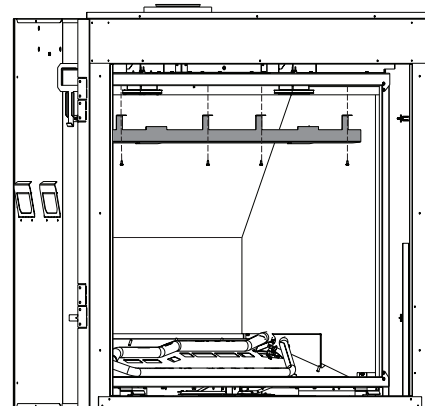

NUMÉRO DE REPÈRE	NUMÉRO DE PIÈCE	DESCRIPTION	QUANTITÉ FOURNIE
	DVP50PWS		
1	39962	Revêtement Avant - Gauche	1
2	39963	Garniture Avant Droite	1
3	39964	Revêtement Côté - Gauche	1
4	39965	Revêtement Côté - Droit	1
5	39966	Revêtement Arrière - Dessous	1
6	39967	Revêtement Arrière - Dessus	1
7	39968	Revêtement Dessus - Centre	1
8	39969	Revêtement Dessus - Gauche	1
9	39970	Revêtement Dessus - Droit	1
10	38271	Support De Revêtement	1

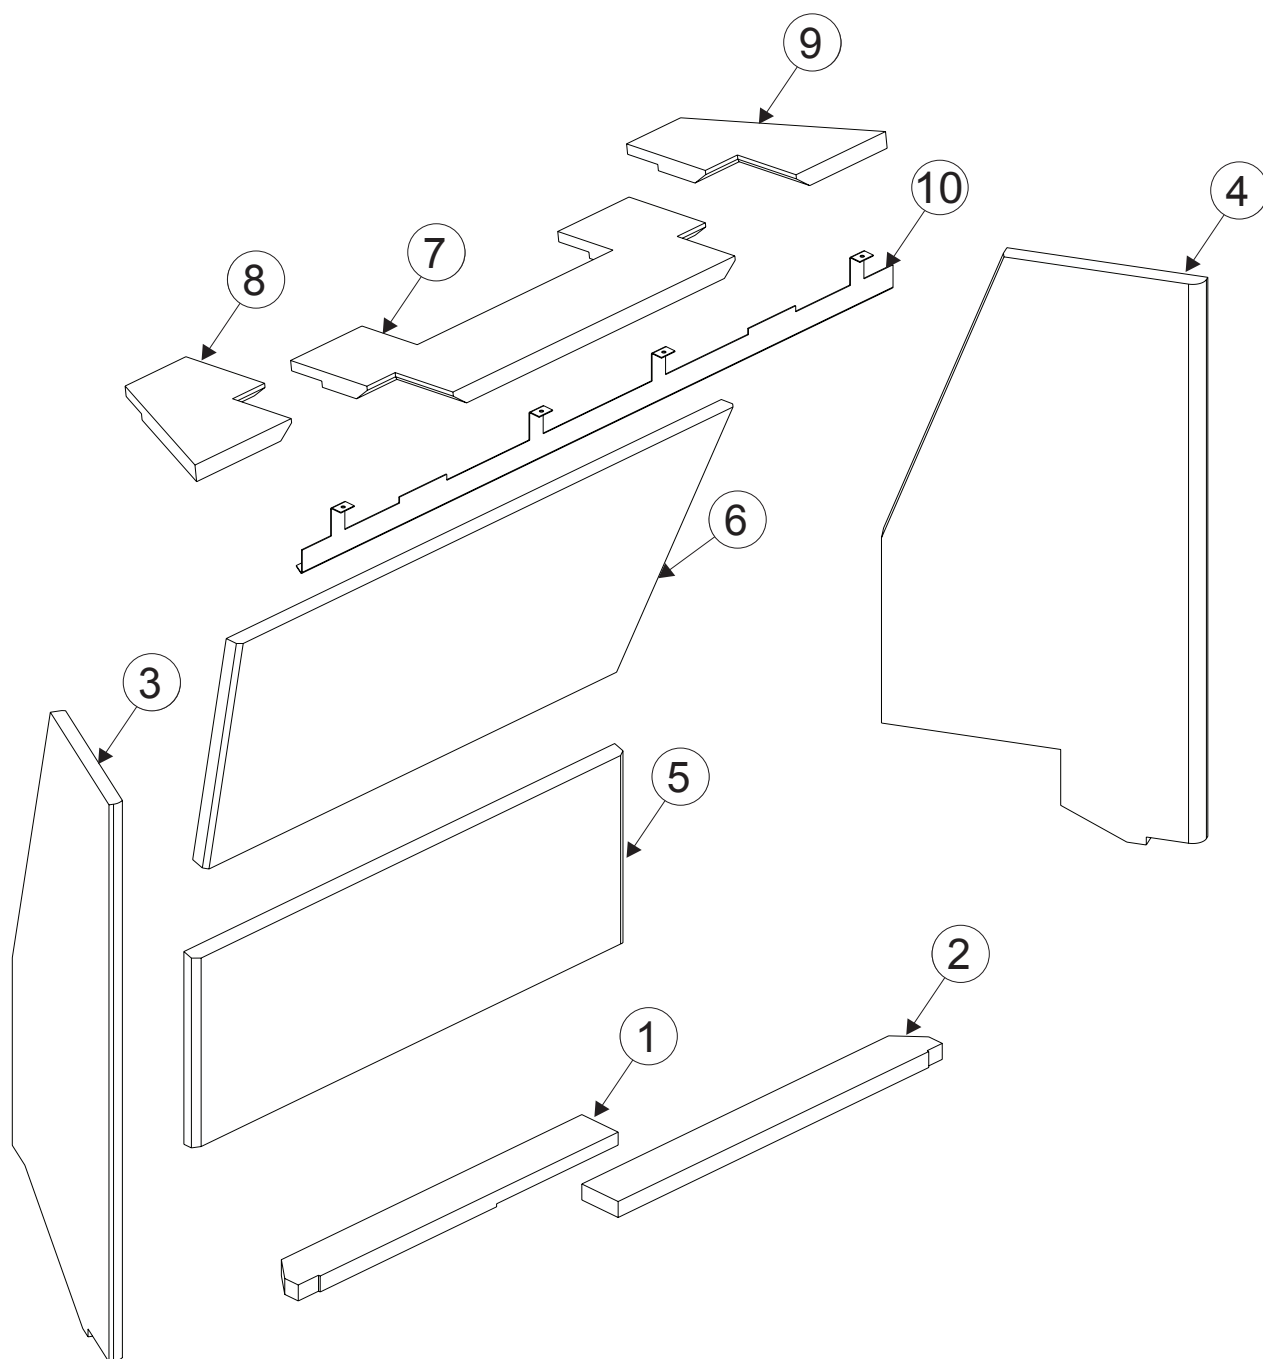

SINCE 1932

Empire Comfort Systems Inc.
Belleville, IL

Pour toute question générale concernant nos produits, veuillez nous envoyer un courriel à info@empirecomfort.com.

Pour toute question d'entretien ou de réparation, veuillez contacter votre concessionnaire.

www.empirecomfort.com

INSTALLATION INSTRUCTIONS

DVCT50 LINER KIT

CERAMIC FIBER LINER	
Model 50	Description
DVP50CPWH	Liner, Whitewash Herringbone Brick

LEAVE INSTRUCTIONS WITH THE HOMEOWNER.

CARTON CONTENTS	
Description	Quantity Supplied
BOTTOM FRONT	1
LINER SIDE - LEFT	1
LINER SIDE - RIGHT	1
LINER REAR - BOTTOM	1
LINER REAR - TOP	1
LINER TOP - CENTER	1
LINER TOP - LEFT	1
LINER TOP - RIGHT	1
BRACKET LINER	1
#10 X 1/2 SCREW	4

TOOLS NEEDED: Phillips Screwdriver

INSTALL FLOOR LINERS

Installation Of Front Liners

1. Remove barrier screen and glass door. (See the owner's manual for instructions.)

2. Place the BOTTOM FRONT LINER as (Shown In Figure 1).

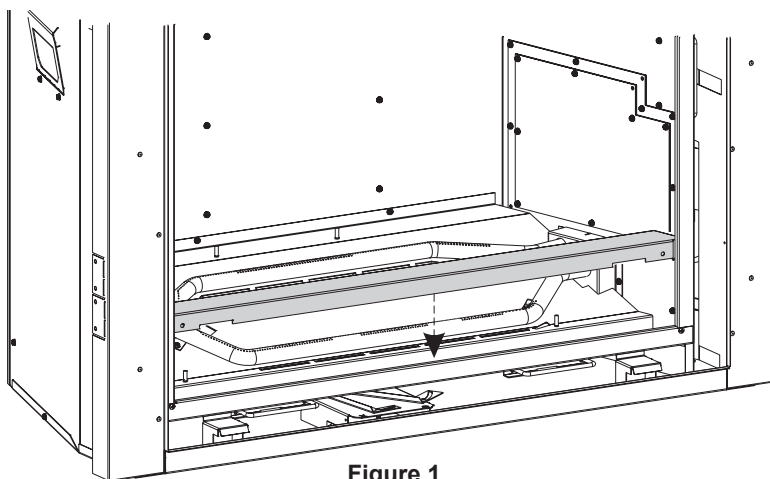


Figure 1

NOTICE: Video of liner installation available on our website at: www.empirecomfort.com.

INSTALLATION OF LINER

1. Place LINER REAR - BOTTOM on the back of the firebox and hold with one hand. (See Figure 2.)

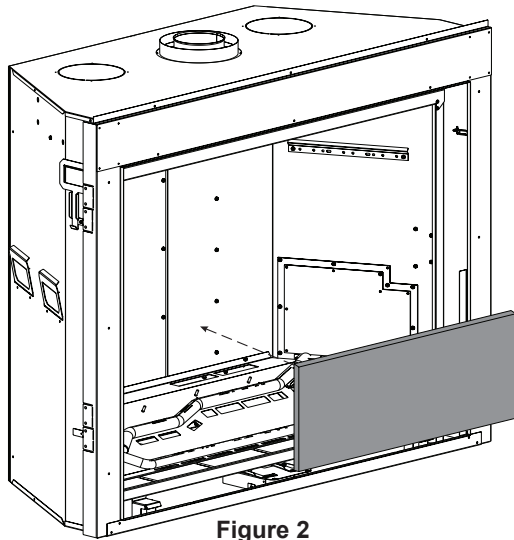


Figure 2

2. Place LINER SIDE - RIGHT against right firebox wall and LINER REAR - BOTTOM and push back to hold into place. (See Figure 3.)

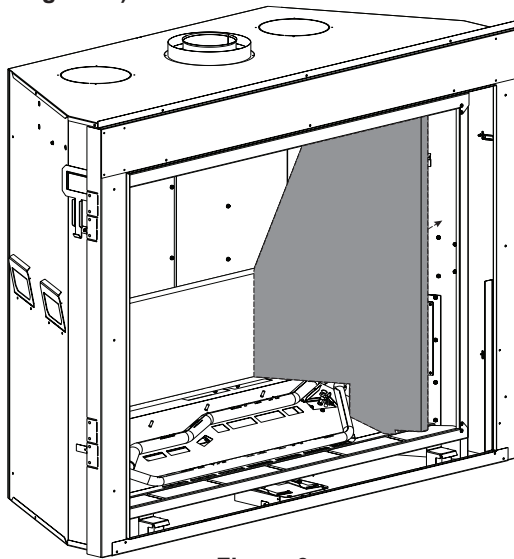


Figure 3

3. Place the LINER REAR - TOP on top of LINER REAR - BOTTOM and rest against right side of FIREBOX and LINER SIDE - RIGHT. (See Figure 4.)

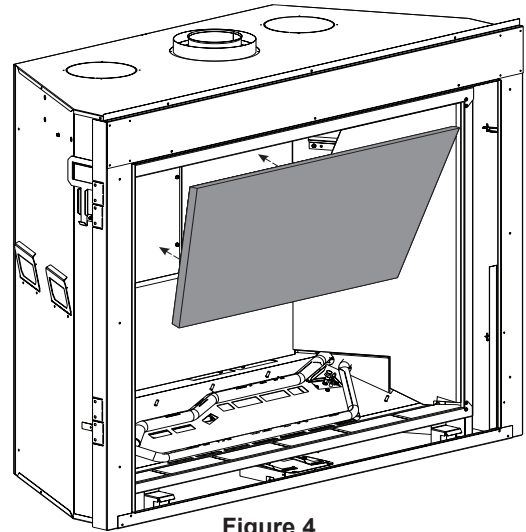


Figure 4

4. Place LINER SIDE - LEFT against left firebox wall and LINER REAR - BOTTOM and push back to hold into place.
5. Secure the LINER BRACKET with (4) screws, then place LINER TOP PIECES so they rest on the LINER REAR - TOP. (See Figure 5.)

NOTICE: Ensure (painted side) faces down, (black side) should face up.



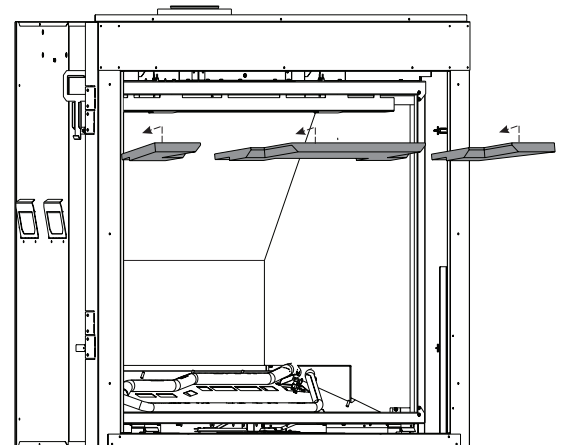


Figure 5

CERAMIC FIBER LINER KIT EXPLODED VIEW AND PARTS LIST

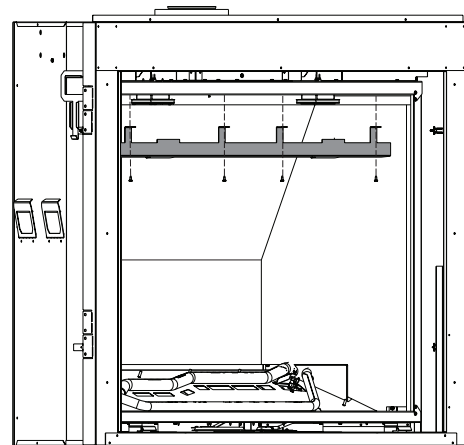

PARTS LIST			
Index Number	Part Number	Description	Quantity Supplied
1	39854	Bottom Front	1
2	41645	Liner Side - Left	1
3	41646	Liner Side - Right	1
4	41647	Liner Rear - Bottom	1
5	41648	Liner Rear - Top	1
6	39977	Liner Top - Center	1
7	39978	Liner Top - Left	1
8	39979	Liner Top - Right	1
9	38271	Bracket Liner	1

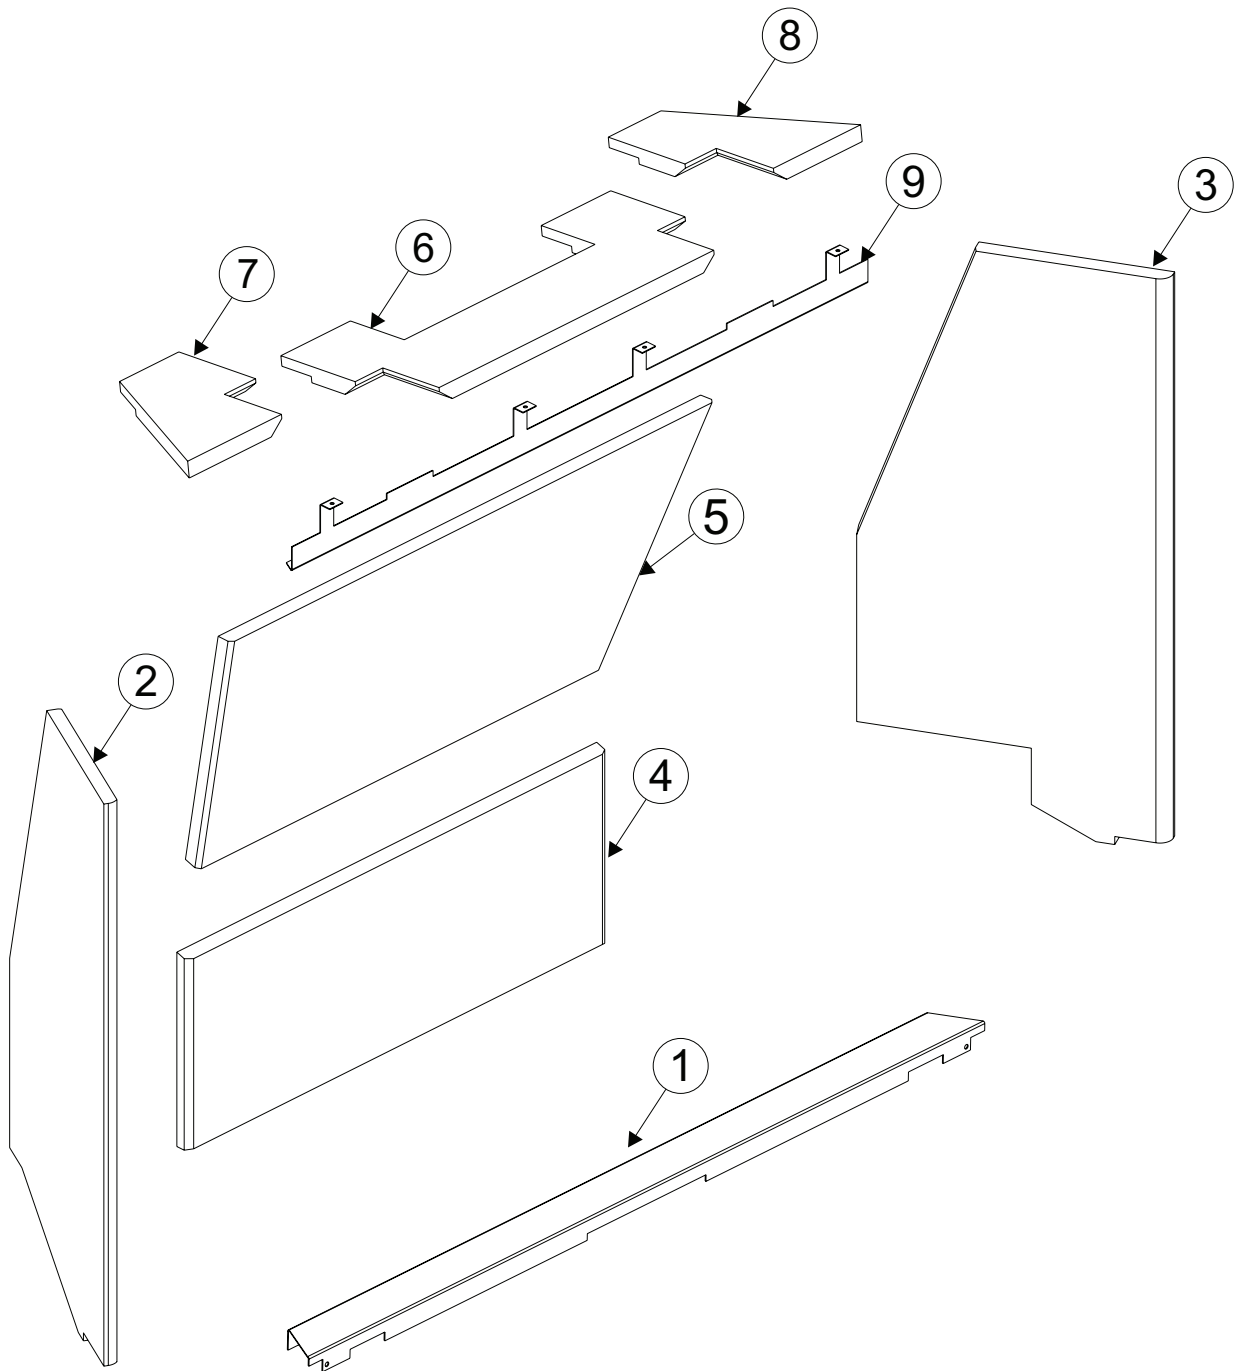

SINCE 1932

Empire Comfort Systems Inc.
Belleville, IL

If you have a general question
about our products, please e-mail
us at info@empirecomfort.com.

If you have a service or repair
question, please contact your dealer.

www.empirecomfort.com